 


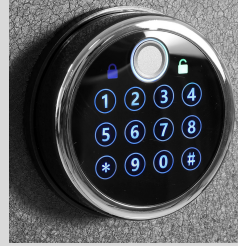

KEYPAD FINGERPRINT SETUP

Follow these steps!

1



Wake up touch pad by touching the pad and pressing the lit up numbers followed by entering 159# (Factory Code)

2

Open Safe Door



Locate Resetting Key and hold for 4 Seconds then release.

3



Apply fingerprint, you will need to apply 3 times to confirm.

4



Repeat steps 1 to 3 to add fingerprints. You can add up to 5.

5



Hold reset key for 20 seconds to factory reset fingerprints

contact info@blackouttactical.com.au for any inquiries
www.blackouttactical.com.au/instructions



KEYPAD CODE SETUP

Follow these steps!

2

Open Safe Door



Top of Gun Door

Bottom of Ammo
Door

Locate Resetting Key
and tap ONCE.

 
4

If buzzer beeps 2 times
password was successful




If buzzer beeps 3 times,
password failed to set, try again

1

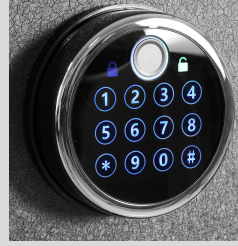

Wake up touch pad by
touching the pad and
pressing the lit up numbers
followed by entering 159#
(Factory Code)

 3

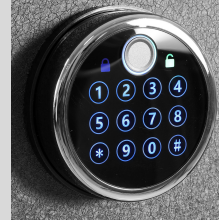

Yellow lights will flash
twice followed by 2 beeps.
Enter a 1 - 8 digit code
followed by *

Resetting Key Pad

Reset the number pad by
pressing the reset key (RED
Button) once followed by
new code and then *

contact info@blackouttactical.com.au for any inquiries
www.blackouttactical.com.au/instructions



FAIL SAFE & TROUBLESHOOTING

Follow these tips!

1

Put keys that come with safe in a secret spot you will remember as this opens the safe if the battery or keypad fails



Press the button found under the keypad and twist anti-clockwise to reveal a key slot

Spare or replacement keys can be ordered by contacting info@blackouttactical.com.au and referencing the code behind the battery

2

Low voltage or Battery issue:

When unlocking your safe by keypad or fingerprint, the module displays red and unlocking identifier displays a green light. This indicates that the battery is insufficient.

Replace at your earliest convenience.

contact info@blackouttactical.com.au for any inquiries
www.blackouttactical.com.au/instructions