



NEW **PRO SERIES SAFE SETUP**

1

Install Battery



Under the code there is a latch, push and twist. This will expose the battery compartment to insert a battery to power the lock

2

Open Safe Door



To open the safe, enter either:

- User Code (default: 123456) or
- Manager Code (default: 777777)
- The green light will flash and the lock will disengage.
- **NOTE: USER MUST CHANGE BOTH USER CODE AND MANAGER CODE**

3

Changing the User Code



- Open the safe door.
- Press the red setting button inside the safe once.
- ➤ Two beeps will sound and the orange light will turn on.
- Enter your new 6-digit code, then press #.
- Test the code with the door open to ensure it works before closing.

4

Changing the Management Code



- Open the safe door.
- Press the red setting button inside the safe once.
- ➤ Two beeps will sound and the orange light will turn on.
- Enter: 00#, followed by your new 6-digit management code, then press #.
- Test the new management code before closing the door.

Silent Mode On/Off

1. Press the red setting button once.
2. Enter: 66#
3. This toggles silent mode. In silent mode, beeps will be disabled.

Factory Reset (Use Only If Required)

1. Press and hold the red setting button for 5 seconds.
2. You'll hear four beeps — the keypad resets to factory settings:
 - Management Code: 777777
 - User Code: 123456

Battery Installation

Underneath the keypad, push and twist the latch to reveal the battery compartment. Insert a quality 9V battery.

 **Tip:** Always use premium 9V batteries to ensure optimal performance and reliability.

Important Notes

- The keypad will lock for 5 minutes after 3 incorrect attempts.
- Always test new codes before closing the door.
- If you lose both codes, contact us with a photo of the lock's rear label (locking ID).

contact info@blackouttactical.com.au
for any inquiries
www.blackouttactical.com.au/instructions